




Dell Inspiron 8600 RAM Replacement

If the RAM is not working, follow this guide.

Written By: Brian Murphy

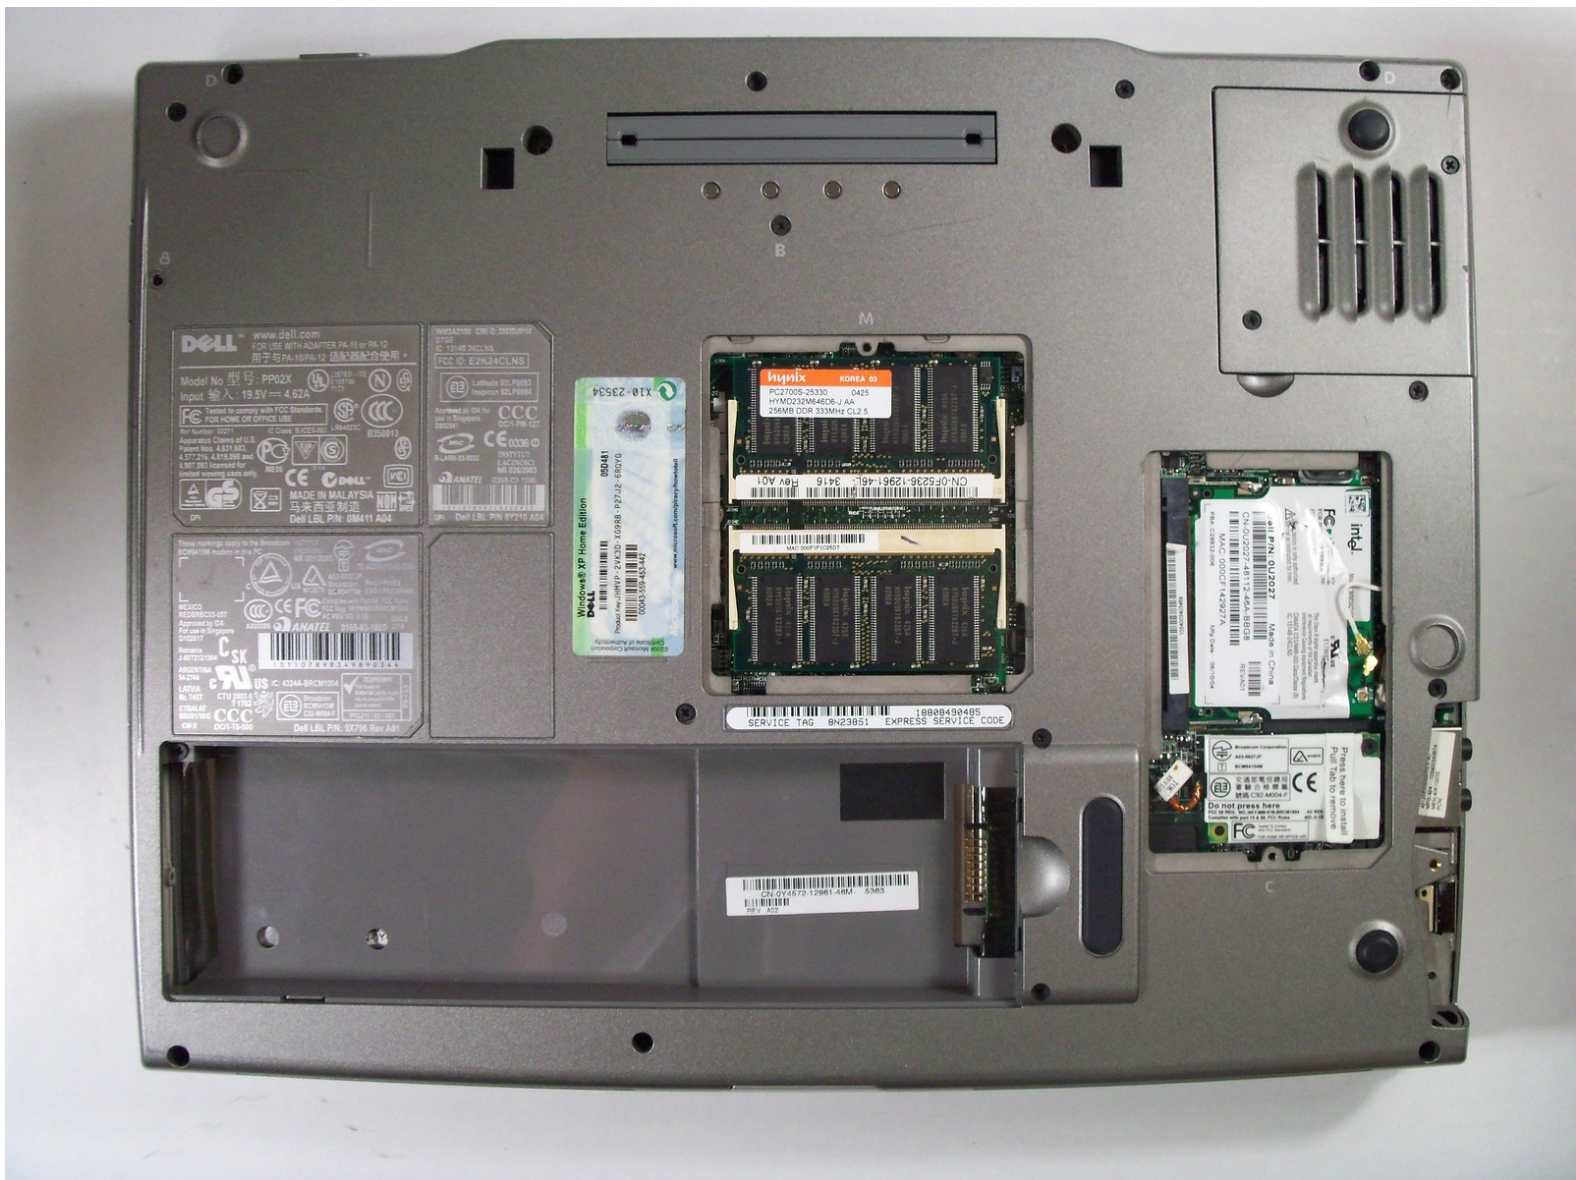

INTRODUCTION

If the RAM is not working, follow this guide.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Remove the battery from the bottom of the laptop.
- Please click on the following link for further instruction on how to remove the battery. [Dell Inspiron 9100 Battery Replacement](#)
- ⓘ It is important to remove the battery so that you will not be electrocuted while working with the computer's hardware.

Step 2 — RAM

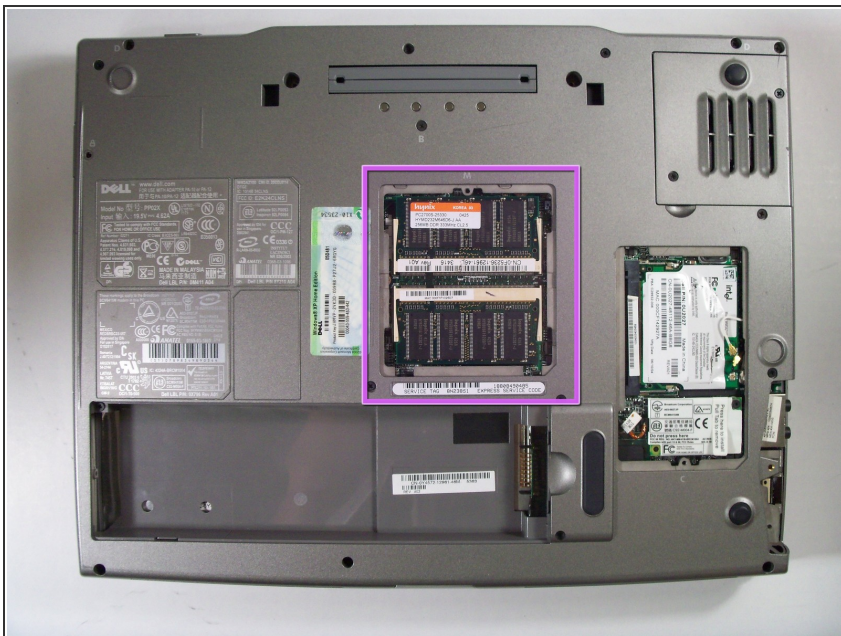

- Remove memory cover on bottom of laptop.
- ⓘ To view the removal of the memory cover, follow the [Dell Inspiron 9100 Memory Replacement](#).

Step 3

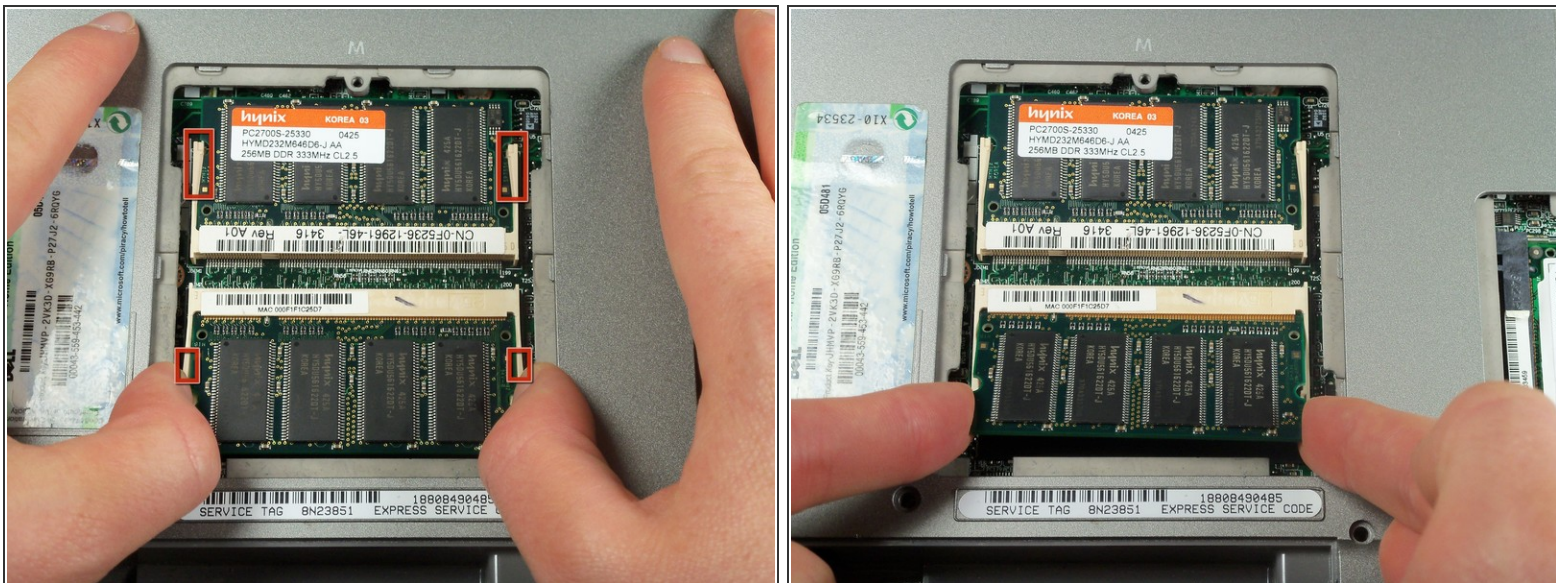

- Pull apart the white plastic tabs on either side of the RAM which will cause it to rise upwards.
- Gently remove the RAM, only touching the edges of the component.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 09:30:04 PM.